

ALPHABETICAL INDEX

A

A-1H or A-1J tanker conversion kit	198E
Accelerometer	305
Access and inspection provisions	8
A-c power supply system, constant-frequency	334
constant frequency a-c power supply dummy	
load	342A
constant frequency load corrector	342
flight-instrument power-failure warning light	342
dimming resistor	342
flight-instrument power-selector switch	342
instrument power transformer	341
inverter load and torquemeter power relay	342A
No. 1 inverter	338
No. 1 inverter dummy-load	342
No. 2 inverter	338
No. 2 inverter control relay	341
No. 2 inverter current-limiter	341
No. 2 inverter dummy-load	342
voltage-sensing relay	342
A-c power supply system, variable-frequency	327
a-c power switching relay	334
a-c voltage test jacks	334
circuit protector switches	333
exciter control unit	333
external power receptacle	334
generator	332
generator field relay	333
generator field switch	333
instrument power transformer	341
power select switch	333
voltage regulator	333
Aero ATP-D1 400 gallon auxiliary fuel tank	198Q
Aero 18A armament control system (LABS), AD-6.	418C
Aero 18C A-1J, armament control system	
(LABS), AD-7	418F
Aero 1A 30-inch adapter	380A
Aero 1A sub-caliber rocket adapter	384A
Aero 6A rocket launcher package	384A
Ailerons	92
control system	92
power boost system	100
actuating cylinder	100
hydraulic pump	100
latch mechanism	100
line filter	101
relief valve	101
tab, fixed	104
Aileron trim tab	101
control system	101
cockpit mechanism	104
leadscrew mechanism	104
Aircraft cleaning	18C, 28, 28A, 28B, 28C
Aircraft dimensions	2B
Aircraft servicing	17, 18, 18A, 18B
Airframe	42
Airspeed indicator	see Pitot-static system
Air temperature indicating system	304
carburetor air temperature bulb	305
free air temperature bulb	305
indicator	305
selector switch	305
AN/APA-89 group	370K
AN/APN-22 radar altimeter system	370D-2
AN/APS-19C search radar system	370F
control console	370J
indicator	370J

nacelle assembly	370J
nacelle connector assembly	370K
AN/APX-6 identification radar (IFF) system	370D-2
control console	370F
receiver-transmitter	370F
AN/ARA-25 automatic direction finding system	354E
AN/ARC-1 VHF communication radio system	349
antenna	351
control console (master)	351
microphone switch	354E
AN/ARC-27A UHF communication radio system	354A
antenna	355
AN/ARN-6 radio compass system	358
AN/ARN-12 noise filter	370D-1
AN/ARN-12 marker beacon receiving system	370D
AN/ARN-14E navigation system	365
ID-249/ARN course indicator	370A
AN/ARN-21 navigational radio homing system	369
ID-250 course indicator damping resistors	370A
ID-250 indicator relay	370A
AT-134A/ARN antenna	370D-1
AT-141A/ARC antenna	355
AT-145B/A antenna	352
Anticollision light	344B
Anticorrosion for piano hinge installation	30A
Antiexposure suit ventilation system	186A
Antiexposure suit venting provisions	61
Anti-G system	192
air filter	192
control valve	193
oil separators	193
pump	193
suit disconnect receptacle	193
Anti-icing and deicing-defrosting	29
Anti-icing fluid	29
Approach light and arresting hook warning light	
system	345
approach light	345
approach light relay	346A
arresting hook bypass relay	346A
arresting hook bypass switch	346F
arresting hook position switch	346F
arresting hook warning light switch	346F
dimming resistor	346F
Armament	372, see also Armament control systems;
Boresighting; External stores; Gun camera	
provisions; Gunnery equipment; Gun sight	
Armament control systems	417, see also Bomb director
system, Mark 3 Mod 5; Aero	
18A and 18C armament control	
system (LABS)	417
Armor plate	150
Arresting gear	150
arresting hook	150
control system	150
control valve	154C
hold-down cylinder air valve	156
lever and push-pull linkage	152
pressure gage and snubber	156
release cable and up-latch assembly	154C
retracting and hold-down cylinder	154C
filling and inflating	18A, 18B
system restrictor	154C
Arresting hook control system	186A
AS313/ARN-6 or AS313B/ARN-6 loop antenna	358A
Audio control, marker beacon	370D-1
Automatic pilot system	see P-1 automatic pilot system
Auxiliary fuel pump	263

ALPHABETICAL INDEX (Continued)

B

- Battery see D-c power supply system
 Belt, seat lap 61
 Bomb director system, Mark 3, Mod 5 418C
 Bomb racks see External stores equipment
 Boresighting equipment 409
 armament datum line 410
 boresight screens 410
 front (ring) sights 409
 rear (peep) sights 409
 Boresight procedure 410
 Brake lockout valve, bottom dive 69
 Brakes see Main landing gear
 Bulb, oil temperature 307

C

- C-2459/ARC-27A UHF control panel 354C
 C-739/ARC control panel (master) 352
 C-865/ARC-1 VHF control panel 349
 Canteen container 61
 Carburetor 208; see Engine controls
 air induction system 208
 air scoop 213
 Catapulting equipment 14
 catapult holdback fitting 14
 catapult hooks 14
 Chartboard 60B
 light circuit 60B
 light switch 346F-1
 Cleaning aircraft 18C, 28, 28A, 28B, 28C
 Cleaning corroded surfaces 30
 Clock, elapsed time 306
 Cockpit 45
 enclosure 49
 control system 52
 actuating cylinder and hydraulic control
 valve 53
 auxiliary system air bottle 56
 auxiliary system air control valve 56
 auxiliary system air pressure gage and
 filler valve 58
 auxiliary system air-to-oil transfer
 cylinder 53
 jettison system 58
 jettison assemblies 58
 floodlights 346F-1
 high intensity 346F-1
 glareshield 48
 liquid and vapor sealing 45
 sliding auxiliary air bottle 56
 sliding auxiliary air control valve 56
 sliding auxiliary air pressure gage and
 filler valve 58
 sliding jettisoning assemblies 58
 sliding jettisoning control 58
 weather sealing 42
 Communication radio microphone switch 354E
 Compass, standby 306; see also G-2 compass
 system, MA-1 compass
 system
 light 346F-1
 Connector, thermocouple lead 307
 Control cables 82
 Controls see Control surfaces
 Control stick 82
 Control surfaces see Ailerons; Aileron trim tab;
 Dive brakes; Elevators; Horizontal stabilizers, Rudder;
 Rudder trim tab; Wing flaps
 Conversion kit, A-1H or A-1J tanker 198E

- Corrosion of dissimilar metals 30
 Cowling, engine 230D
 accessory-section 244
 cowl bow 238
 cowl flaps 239
 cowl flap control circuit 243
 cowl flaps, nose 239
 actuator and jackscrews 239
 position indicator 241
 cowl flaps, side 241
 actuator and jackscrews 241
 nose section 235
 side panels 235
 Cylinder head temperature
 indicator see Engine cylinder head
 temperature indicating system

D

- Dc power supply system 311
 battery 313
 filling 17
 battery, relay 318
 bus control relay 320
 circuit-breaker panels 321
 control switch 313
 external power 320
 pilot rectifier 321
 pilot relay 321
 power receptacle 320
 inner stations 372
 fuselage ejector rack 372
 hoisting provisions 375
 mine and parachute lanyard attaching
 fitting 378B
 pylon 372
 torpedo nose-cap release fitting 378B
 wing external stores racks 379
 Aero 1A 30-inch adapter 380A
 Mark 51, Mod 14 stores rack 380A
 mine parachute lanyard attaching fitting 380A
 torpedo nose-cap release fittings 380A
 outer stations 381
 Aero 1A subcaliber rocket adapter 384A
 power relay 321
 starting switch 320
 generator 318
 generator control (reverse current) relay 319
 generator warning light 321
 dimming resistor 321
 generator voltage regulator 319
 monitor bus relay 320
 power control switch 313
 power distribution 324A
 secondary bus relay 320
 secondary bus transfer switch 320
 test jacks 321
 voltage regulator 319
 Dissimilar metals, corrosion of 30
 Distribution and ignition harness 230A
 Dive brakes 61
 bottom 64
 control system 64
 safety circuit 65
 interlock switch 343
 side 62

E

- Ejector-rack pylon, fuselage 372
 Elapsed time clock 306
 Eight-day clock 306

ALPHABETICAL INDEX (Continued)

Electrical equipment 310
 Electrical external power receptacle 18C
 Electrical systems 310; see A-c power supply system,
 constant-frequency; A-c power supply system, variable-frequency;
 D-c power supply system; Wiring data index
 Elevators 106
 control system 106
 tips 106
 Emergency lighting relay 346K
 Emergency lighting transformer 346K
 Empennage 79
 Engine 200; see also Cowling, Engine controls
 build-up 280
 exhaust stack forward extension pipes 230D
 exhaust stacks 230D
 exhaust system 230D
 mount 230B
 vent and drain system 230D
 Engine analyzer equipment provisions 230A
 synchronizing generator 230B
 Engine controls 205
 carburetion and air induction system 208
 air scoop 213
 carburetor 208
 control circuit 214
 air door actuator 214
 ignition system 228B, 230
 coils 230A
 distributors and ignition harness 230A
 magneto 230A
 spark plugs 230A
 switch 228B, 230
 manifold pressure regulating system 217
 regulator 217
 mixture control 214
 quadrant 205
 starting system 227
 starter 228
 relay 228
 vibrator 228A, 228B, 229
 supercharger control 218B, 222
 throttle control 218
 water injection system 222
 control circuit 222B
 firewall switch 225
 master control switch 225
 power control valve 227
 pump 227
 supply tank 225
 Engine cylinder head temperature indicating system 307
 indicator 307
 thermocouple 308
 thermocouple lead connector 307
 thermocouple leads 307
 thermocouple resistor 307
 Engine-driven fuel pump 261
 Engine exhaust stacks 230D
 forward extension pipes 230D
 Engine gage unit 307
 oil temperature bulb 307
 Engine instruments and instrument systems 306
 Engine ignition system 230
 Engine mount 230B-3
 Engine starting system 227
 Engine supercharger 218B
 Engine torque pressure indicating system 308, 230B
 Exterior light system 343
 anticollision 344B

control console 343
 dimming resistors 344B
 flasher-coder 344A
 fuselage formation lights 344B
 fuselage lights 344A
 master switch 343
 radio noise filter 344A
 tail position lights 344B
 wing position lights 344B
 wing tip formation lights 344B
 External fuel quantity indicating system 308
 External-stores ejector rack, fuselage 372
 External stores equipment 372
 control systems 384C
 electrical 384C
 armament panel 385
 armament power supply circuit 385
 armament safety and disabling circuit 385
 arming circuit 386
 ejecting mechanism 375
 fuselage ejector-rack test circuit 386
 interval generator control circuit 385
 rocket latch circuit 386
 manual release 386
 fuselage manual release locking
 mechanism 391
 inner-station 391
 outer-station 391
 external sight post 407
 Aero 6A rocket launcher package 384A
 rocket launchers 382
 External-stores inner-station manual release system 391
 External-stores inner stations 372
 External-stores manual release system 391
 External-stores outer-station manual release system 391
 External-stores outer stations 381
 rocket launcher package, Aero 6A 384A
 rocket launcher package system, LAU-101A 381

F

Flaps see Wing flaps
 Flare dispenser provisions 381
 Flight instruments and instrument systems 289
 Fuel cell, main 248
 Fuel pressure gage see Engine gage unit
 Fuel pump shutoff switch 198AS
 Fuel quantity indicating system, external 260D, 308
 indicator 260D-6
 junction box 260D-3
 power unit 260D-6
 quick disconnects 260D-3
 selector switch 260D-3
 tank probes 260D-2
 testing 260D-7
 test switch 260D-6
 trouble shooting 256A
 Fuel quantity indicating system, main 308
 Fuel quantity indicating system main fuel cell 256, 308
 amplifier 257
 bridge unit 257
 indicator 257
 tank unit 256A
 test switch 257
 Fuel system 247
 auxiliary pump 264
 auxiliary tank 284P
 control circuit 265
 cell, main 248

ALPHABETICAL INDEX (Continued)

bellmouth assembly	255
defueling valve	256
filling	17
engine-driven pump	261
engine priming valve	265
control circuit	265
external auxiliary tank	257
filling	17
pressure warning system	265
strainer	261
drain valve	261
Fuselage	42; see also Cockpit; Overturn structure; Windshield compartments
sealing	42
Fuselage ejector-rack pylon	372
Fuselage external-stores inner stations	372
Fuselage lights	344A
formation	344B
Fuselage mine parachute lanyard attaching fitting	378C
Fuselage torpedo nose cap release fitting	378C
G	
G-2 compass system	291
adapter	295
amplifier	295
control switch	295
master direction indicator	294
remote compass transmitter	294
Gench adjustment of automatic pilot controller	297
General description	2B
Glareshield, cockpit	48
Ground handling	7; see also Hoisting provisions; Jacking arrangement; Leveling provisions; Parking and tie-down; Special tools; Towing
Gun camera provisions	407
controls	407
Gunnery equipment	395
gun accessories	399
ammunition boxes	399
cartridge case ejection chutes	401
cartridge link ejection chutes	401
feed chutes	399
feed mechanisms	399
gun control system	402
charger cylinders	406
charging and firing relays	407
control switches	406
control valve	405
hydraulic pressure-switch units	406
safety switches	406
solenoids, gun firing	407
trigger switch	406
guns, inboard	395
forward mounts	397
rear mounts	397
guns, outboard	397
forward mounts	397
rear mounts	399
Gun sight	407
light control circuit	407
sight post	406
Gyro-horizon control	see P-1 automatic pilot system
H	
Harness and inertia reel, safety	60A
Headrest, pilot's	60B
Heating and ventilating systems	180

Heating system	180
control handle and linkage	180
heater muff assembly	185
inlet wye-duct	185
riser duct and air control valves	183
Hoisting provisions	7
complete airplane	7
demountable power plant	7
fuselage fuel cell	12
tail of airplane	8
wing outboard panels	8
Horizontal stabilizer	124
actuator, horizontal stabilizer	126H
control system	126
indicator	126H
tips	124
Horizontal stabilizer and drive brake interlock switch	343
Hose reel lock pin	198AR
Hydraulic reservoir filter	170A
air	170A
Hydraulic system	158
aileron power boost system	177
auxiliary pressure system	174
pump	174
pump control circuit	174
relief valve	177
selector valve	177
main pressure system	168
accumulator	170B
air filler valve and pressure gage	172
charging	17, 18
air relief valve and restrictor	170B
filling	17
filter	170A
check valves	177
external power connections	18C
manual bypass valve	172
pressure gage	172
pump	170B
regulator	170B
relief valve	172
reservoir	168
air check valve	170B

I

Ignition	see Engine controls
ID-249/ARN course indicator	370A
ID-250 course indicator damping resistor	370A
ID-250 indicating relay	370A
Inertia reel	60A
Indicator, temperature	307
Indicator thermocouple leads	307
Indicator, torque pressure	308
In-Flight Fueling Store	198S
access provisions	198T-2
control panel	198AD
decontamination	198AJ
dolly	198AW
emergency system	198AH-20
fuel system	198AH-20
hydraulic system	198AH-2
installation	198U
principle dimensions	198T-1
servicing and adjustment	198AJ
shipping container	198AT
testing in-flight fueling system	198BJ
trouble shooting in-flight fueling system	198BE
In-flight Fueling System	197, 261
ATP-D1 400-gallon auxiliary fuel tanks	198Q
conversion-kit, A-1H or A-1J tanker	198E

ALPHABETICAL INDEX (Continued)

adapter cables	198E	pressure altimeter	291
check valve assembly	198M-2	rate-of-climb indicator	291
control panel adapter	198Q	static boom	290A
fuel booster pump	198J	standby compass	306
relay panel	198J	turn and bank indicator	302
tanker circuit breakers	198D	vacuum regulator valve	302
tanker electrical provisions	198D	vacuum relief valve	302A
tanker fuel system	198	warning light	304
tanker provisions	198	warning light switch	303
tanker relay panel bracket	198E	warning light transfer switch	304
tanker right-hand fuel booster pump		wing flap position transmitter	304
disconnect switch assembly	198E	Instrument systems - miscellaneous	289
Instrument panel	286	Interior primary light system	346G
masks	289	control console	346H
Instrument systems - engine instruments	306	dimming resistors	346J
engine cylinder head temperature indicating		emergency lighting relay	346K
system	307	emergency lighting transformer	346K
temperature indicator	307	lighting control relay	346J
temperature indicator thermocouple	308	warning light dimming relays	346J
thermocouple lead	307	warning light dimming resistors	346J
thermocouple lead connector	307	Interior secondary light system	346F
thermocouple resistor	307	chartboard lights	346F-1
engine gage unit	307	light switch	346F-1
main fuel quantity indicating system	308	cockpit floodlights	346F-1
manifold pressure gage	308	control console	346F-1
oil temperature bulb	307	standby compass light	346F-1
tachometer system	306		
tachometer generator	306		
tachometer indicator	306		
Instrument systems - flight instruments	289		
accelerometer	305		
air temperature indicating system	304		
air temperature indicator	305		
air temperature selector switch	305		
carburetor air temperature bulb	305		
eight-day clock	306		
elapsed time clock	306		
free air temperature bulb	305		
G-2 compass system	291		
compass adapter	295		
compass amplifier	295		
compass control switch	295		
master direction-indicator	294		
ID-250/ARN course indicator	296B		
remote compass transmitter	294		
MA-1 compass system	295		
amplifier	296B		
automatic pilot adapter	296B		
controller	296B		
directional gyro	296A		
transmitter	295		
landing gear and wing flap position indicating			
system	302A		
landing gear and flap position indicator	302A		
locked position switch	302A		
position switch	303		
tail gear position and warning light switch	303		
P-1 automatic pilot system	296C		
amplifier adapter	299		
clutch switch	302		
controller	296D		
gyro horizon control	297		
power junction box	298D		
rate gyro control (bank and turn control)	297		
servos	299		
servo amplifier	299		
servo disconnects	302		
servo disconnect system	302		
pitot-static system	289		
airspeed indicator	291		
pitot-static heater circuit	291		
pitot tube	289		
pressure altimeter	291		
rate-of-climb indicator	291		
static boom	290A		
standby compass	306		
turn and bank indicator	302		
vacuum regulator valve	302		
vacuum relief valve	302A		
warning light	304		
warning light switch	303		
warning light transfer switch	304		
wing flap position transmitter	304		
Instrument systems - miscellaneous	289		
Interior primary light system	346G		
control console	346H		
dimming resistors	346J		
emergency lighting relay	346K		
emergency lighting transformer	346K		
lighting control relay	346J		
warning light dimming relays	346J		
warning light dimming resistors	346J		
Interior secondary light system	346F		
chartboard lights	346F-1		
light switch	346F-1		
cockpit floodlights	346F-1		
control console	346F-1		
standby compass light	346F-1		
		J	
Jacking arrangement	12		
jack pads	12		
		L	
LABS . . . see Aero 18A/C, A-1J armament control system			
Landing flaps	see Wing flap		
Landing gear	128A; see also Main landing gear		
gear; Tail landing gear			
Landing gear wheel brake fires	30		
Landing gear control system	142		
control valve	144		
safety circuit	143		
Landing gear flashing warning system	304		
flasher unit	304		
flap switch	304D		
throttle switch	304D		
warning light	304		
Landing gear and wing flap position indicating			
system	302A		
indicator	302A		
locked position switch	302A		
position switch	303		
tail gear position and warning light switch	303		
warning light circuit	303		
warning light	304		
warning light switch	303		
warning light transfer switch	304		
wing flap position transmitter	304		
LAU-10/A rocket launcher package system	381		
Leveling provisions	12		
Lights	see Approach light and arresting hook		
	warning light system; Exterior light		
	system; Interior primary light system;		
	Interior secondary light system; Service		
	light system		
Liquid and Vapor sealing	45		
Lubrication	18C		
	M		
MA-1 compass system	295		
amplifier	296B		

ALPHABETICAL INDEX (Continued)

automatic pilot adapter	296B
controller	296B
directional gyro	296A
transmitter	295
Magnetic chip detector plug installation	280A
Magnetic chip detector warning system	308
Magnetic chip detector - wiring diagram	280B
Magneto	230A
Main fuel quantity indicating system	308
Main landing gear	128A
actuating cylinders	145
actuating linkage	132
brakes	128A
control system	134
door actuating cylinders	147
doors and fairings	137
door sequence valves	147
lock valves	147
shock struts	128B
filling and inflating	18
strut telescoping mechanism	132
wheels and brakes	132
Manifold pressure gage	308
Manual release	
external stores	391
inner station	391
outer station	391
locking mechanism, fuselage rack	391
Mark 51, Mod 14 stores rack	380A
Marker beacon audio control	370D-1
Master direction indicator	294
Mine parachute lanyard attaching fitting, fuselage	378C
Movable surfaces	79

N

Noise filter, AN/ARN-12	370D-1
-----------------------------------	--------

O

Oil cooler door	275
actuator	276
control circuit	275
control thermostat	275
control unit	276
Oil pressure gage	see Engine gage unit
Oil system	266
bypass and surge protection valve	278
cooler and supporting structure	275
door	275
actuator	276
control circuit	275
open limit switch	278
thermostat control	276
unit control	276
dilution system	278
control valve	278
shut-off valve	278
diverter valve	271
actuating thermoswitch	273
control circuit	273
relay	273
supply tank	266
filling	17
throttle	see Engine controls
control circuit	273
relay	273
Oil temperature bulb	307
Oil temperature gage	see Engine gage unit
Overtur structure	48
Oxygen system	186A
breathing and radio wiring tube assembly	192

filler and check valve	191
lines	190
manual shut-off valve	191
regulator	191
supply cylinder	191
charging	17, 18C

P

P-1 automatic pilot system	296C
amplifier adapter	299
controller bench adjustment	296D
controller	296D
gyro-horizon indicator	297
Parking and tie-down	12
Pilot clutch switch	302
Pilot rate gyro control	297
Pilot servo disconnect	302
power junction box	298D, 341
rate gyro control	297
servos	299
servo amplifier	299
servo disconnect system	302
clutch switch	302
servo disconnects	302
system	302
Pilot's headrest	60B
Pilot's instrument panel masks	288C
Pilot's relief tube	61
Pitot-static system	289
airspeed indicator	291
heater circuit	291
pitot tube	289
rate-of-climb indicator	291
static boom	290A
Power plant	see Engine; Engine controls; Fuel system; Oil system; Propeller

Power plant and related systems	200
Power plant, demountable	200
Pressure gages, miscellaneous	308D
Propeller	244
controller	246C

R

R-122/ARN-12 receiver	370D
Radar systems	370D-2
Radio and radar systems	348
Radio noise filter	344A
Radio system	348A
Rate-of-climb indicator	see Pitot-static system
Relief tube, pilot's	61
Reservoir filter, hydraulic	170A
Resistor, thermocouple indicator	307
Rocket launchers	see External stores equipment
Rudder	106
control system	113
spring mechanism	120
Rudder pedals	113
Rudder trim tab	120
control system	120

S

Safety circuits	342A
dive brake safety solenoid	342B
landing gear retraction, cowl flap, and dive brake safety circuit	342A
landing gear safety solenoid	342B
retraction release switch	342A

ALPHABETICAL INDEX (Continued)

horizontal stabilizer and dive brake interlock switch	343
Safety harness and inertia reel	60A
Sealing	see Fuselage
Seat, pilot's	58A
actuator	59
control circuit	58A
control switch	59
lap belt	61
Service light system	346K
forward equipment compartment	346L
light switch	346L
radio compartment	346L
light switch	346L
Servicing	15
Servo amplifier	230B-3
Shock struts	see Main landing gear; Tail landing gear
Spark plugs	230A; see Engine controls (ignition)
Special stores	417
Special tools and ground handling equipment	27
Spray tank provisions	381
Stabilizer	see Horizontal stabilizer; Vertical stabilizer
Stall warning system	308D
adjustment	308F
control shaker	308L
flap potentiometer	308J
lift computer	308K
lift transducer	308D
testing procedure	308G
trouble shooting	308F
Standby compass light	346F-1
Starter	228; see Engine controls
relay	228
vibrator	229
Stick, control	see Control stick
Sub-caliber rocket adapter, Aero 1A	384A
Supercharger	see Engine controls

T

Tachometer system	306
generator	307
indicator	306
Tail cone section	198T-6
Tail hook	see Arresting gear
Tail landing gear	140
actuating cylinder	148
axle	142
shock strut	140
filling and inflating	17, 18
tail wheel-locking control system	148
yoke	140A
Tail position lights	344A
Temperature indicator	307
thermocouple	308
Thermocouple lead connector	307
Thermocouple leads, indicator	307
Thermocouple resistor, indicator	307
Tie-down	see Parking and tie-down
Torpedo-nose-cap release fittings	378C
Torque pressure indicating system, engine	308
Torque pressure indicator	308, 230B-3
Torque pressure transmitter	230B-1
Towing	12
Transformer, emergency lighting	346K
Trim tabs	see Aileron trim tab; Rudder trim tab
Turn-and-bank indicator	302

U

Utility system	180; see also Anti-G system; Heating system; Oxygen system; Ventilating system; Windshield degreaser system
--------------------------	---

V

Vacuum regulator valve	302
Vapor sealing	45
Ventilating system	185
air scoops	186
baffle	186
control handle and linkage	185
directional air outlet	186
inlet wye-duct	186
Vertical gyro indicating system	288C
Vertical stabilizer	79
tip	79

W

Warning system, magnetic chip detector	308
Water injection system	see Engine controls
power	227
pump	227
Weather sealing	42
Weights (airplane)	2B
Wheels	see Main landing gear; Tail landing gear
Windshield	45
rain repellent, applying	18C
Windshield degreaser (de-icing) system	193
control circuit	196
filter	196
pump	196
reservoir	196
spray tube	196A
switch	196A
Wing	69
center section	70
folding	7
folding and locking control system	73
control valve	73
folding cylinders	74
locking cylinders	78
outboard panels	71
spreading	7
tips	72
Wing external-stores racks	379
mine parachute lanyard attaching fitting	380A
Wing flap	126H
control system	126H
Wing flap position indicating system	see Landing gear and wing flap position indicating system
Wing position lights	344B
Wing stores-rack sway braces	380A
Wing stores-rack torpedo-nose cap release fittings	380A
Wing tip formation lights	344B
Wiring data (diagram) index	423

AVIALOGS
WWW.AVIALOGS.COM